Pioneer *sound.vision.soul*

Service Manual

ORDER NO.
PET02001

HOME THEATER LOUDSPEAKER SYSTEM

S-FCRW220
S-FCRW720

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODELS AND TYPES

MODEL	TYPE		COMPONETS			POWER REQUIREMENT	REMARKS
	KUXC	KCXC	SUBWOOFER	CENTER FRONT SATELLITE	REAR SATELLITE		
S-FCRW220-K	○	○	1	3	2	AC120V	
S-FCRW220-S	○	○	1	3	2	AC120V	
S-FCRW720-S	○		1	3	3	AC120V	

CONTENTS

1. SAFETY INFORMATION 2
2. DISASSEMBLY 3
3. PACKING, EXPLODED VIEWS AND PARTS LIST 3
4. SCHEMATIC AND PCB CONNECTION DIAGRAMS .. 6
5. PCB CONNECTION DIAGRAM 10
6. PCB PARTS LIST 13
7. ADJUSTMENT 15
8. PANEL FACILITIES 16
9. SPECIFICATIONS 17

PIONEER CORPORATION 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153-8655, Japan
PIONEER ELECTRONICS SERVICE, INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.

© PIONEER CORPORATION 2002

1. SAFETY INFORMATION

This service manual is intended for qualified service technicians ; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual.
Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.

WARNING
This product contains lead in solder and certain electrical parts contain chemicals which are known to the state of California to cause cancer, birth defects or other reproductive harm.

Health & Safety Code Section 25249.6 – Proposition 65

NOTICE
(FOR CANADIAN MODEL ONLY)
Fuse symbols (fast operating fuse) and/or (slow operating fuse) on PCB indicate that replacement parts must be of identical designation.

REMARQUE
(POUR MODÈLE CANADIEN SEULEMENT)
Les symboles de fusible (fusible de type rapide) et/ou (fusible de type lent) sur CCI indiquent que les pièces de remplacement doivent avoir la même désignation.

(FOR USA MODEL ONLY)

1. SAFETY PRECAUTIONS

The following check should be performed for the continued protection of the customer and service technician.

LEAKAGE CURRENT CHECK

Measure leakage current to a known earth ground (water pipe, conduit, etc.) by connecting a leakage current tester such as Simpson Model 229-2 or equivalent between the earth ground and all exposed metal parts of the appliance (input/output terminals, screwheads, metal overlays, control shaft, etc.). Plug the AC line cord of the appliance directly into a 120V AC 60Hz outlet and turn the AC power switch on. Any current measured must not exceed 0.5mA.

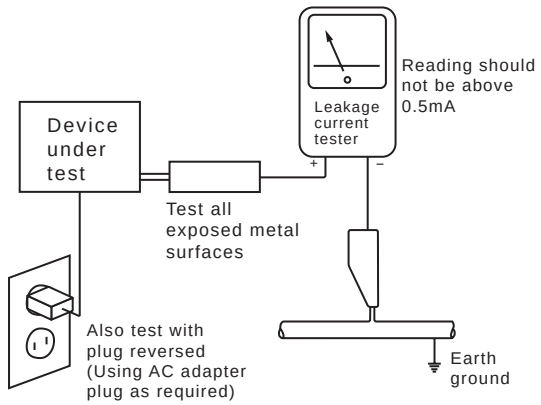
Reading should not be above 0.5mA
Leakage current tester
+
–
Device under test
Test all exposed metal surfaces
Also test with plug reversed (Using AC adapter plug as required)
Earth ground

AC Leakage Test

ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

2. PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in the appliance have special safety related characteristics. These are often not evident from visual inspection nor the protection afforded by them necessarily can be obtained by using replacement components rated for voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this Service Manual.

Electrical components having such features are identified by marking with a on the schematics and on the parts list in this Service Manual. The use of a substitute replacement component which does not have the same safety characteristics as the PIONEER recommended replacement one, shown in the parts list in this Service Manual, may create shock, fire, or other hazards.

Product Safety is continuously under review and new instructions are issued from time to time. For the latest information, always consult the current PIONEER Service Manual. A subscription to, or additional copies of, PIONEER Service Manual may be obtained at a nominal charge from PIONEER.

2. DISASSEMBLY

2.1 SUBWOOFER

- POWER AMP SECTION
  Remove the 8 screws from the power amplifier.
  Remove the connector lead, etc.
- FRONT PANEL
  The front panel is attached to the cabinet by its bosses applied with adhesive.
  To detach it, pry it open by inserting a flat blade screwdriver into bottom slot between the cabinet and front panel.
- SPEAKER
  To detach first remove the front panel, then remove the 4 external screws.

2.2 SATELLITE

- METAL GRILLE

The metal grill is attached to the cabinet by butyl rubber.
To detach it, pull it away by a hook.

3. PACKING EXPLODED VIEWS AND PARTS LIST

NOTES:

- *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Parts marked by " " are not always kept in stock. Their delivery time may be longer than they may be unavailable.*

3.1 PACKING

Parts List

Mark	No.	Description	Parts No.
	1	Instruction Manual (220)	279083
	2	instruction Manual (720)	279503
	3	RCA Pin Cable CEA Purple	278397
	4	Speaker Wire for FR CEA Red 5M	278406
	5	Speaker Wire for FL CEA White 5M	278411
	6	Speaker Wire for C CEA Green 4M	278426
	7	Speaker Wire for RR CEA Grey 8M	278431
	8	Speaker Wire for RL CEA Blue 8M	278446
	9	Speaker Wire for RL CEA Brown 10M	279494
	10	Rubber Foot (A) Set (220)	277963
	11	Rubber Foot (A) Set (720)	278139
	12	Rubber Foot (B) Set	277978
	13	Styro Pad Top	277527
	14	Styro Pad Mid	279058
	15	Styro Pad Bottom	279063
	16	Packing Case (220-K/KUXC)	279241
	17	Packing Case (220-K/KCXC)	279969
	18	Packing Case (220-S/KUXC)	279043
	19	Packing Case (220-S/KCXC)	279474
	20	Packing Case (720-S/KUXC)	279390
	21	Speaker Wire + Foot Assy (220)	279221
	22	Speaker Wire + Foot Assy (720)	279489

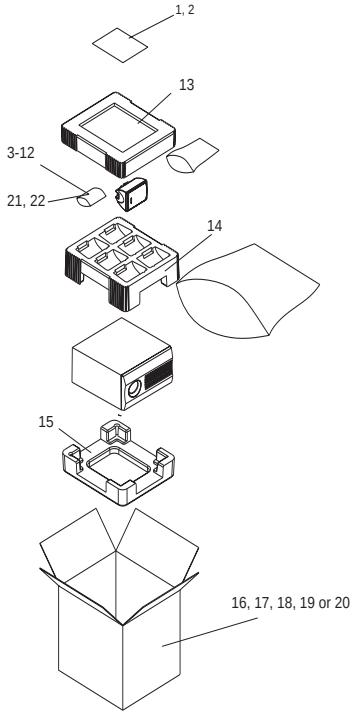

S-FCRW220
S-FCRW720

3.2 EXTERIOR SECTION

3.2.1 POWERED SUBWOOFER

Parts List

Mark	No.	Description	Parts No.
NSP	1	Cabinet black PVC (K)	279281
NSP	2	Cabinet silver PVC (S)	279112
NSP	3	Amplifier Assy (HTP-A3)	277374
⚠	4	Front Panel black painted (K)	279296
⚠	5	Front Panel silver painted (S)	279127
	6	Port Flare Assy	278000
	7	Woofer	278604
NSP	8	Logo Badge gold (K)	277458
NSP	9	Logo Badge silver (S)	278595
	10	Woofer Gasket	279003
	11	Port Gasket	277750
	12	Screw for woofer + AMP	278015

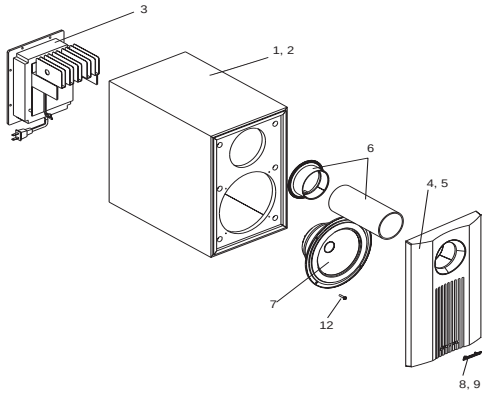

3.2.2 SATELLITE SPEAKER

Parts List

Mark	No.	Description	Parts No.
	1	Satellite Front/Center Assy (K)	279305
	2	Satellite Front/Center Assy (S)	279132
	3	Satellite Rear Assy (K)	279345
	4	Satellite Rear Assy (S)	279192
	5	Metal Grill with Logo (K)	279310
	6	Metal Grill with Logo (S)	279147
	7	Bracket (K)	280093
	8	Bracket (S)	279172
	9	Screw for Bracket	278055

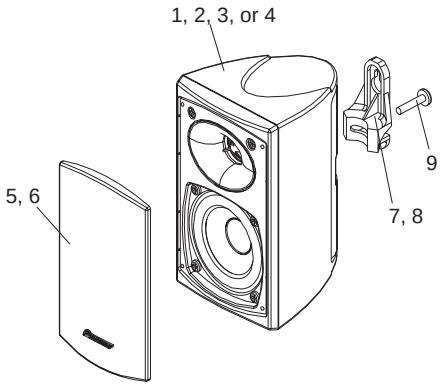

SCHEMATIC DIAGRAM

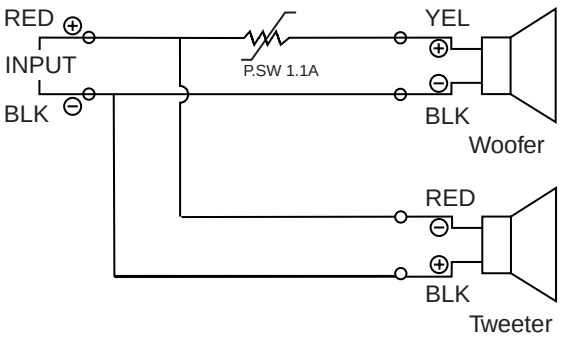

3.3 POWER AMP SECTION

NOTES : ● *Parts marked by " NSP " are generally unavailable because they are not in our Master Spare Parts List.*
● *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
● *Screw adjacent to ∞ mark on the product are used for disassembly.*

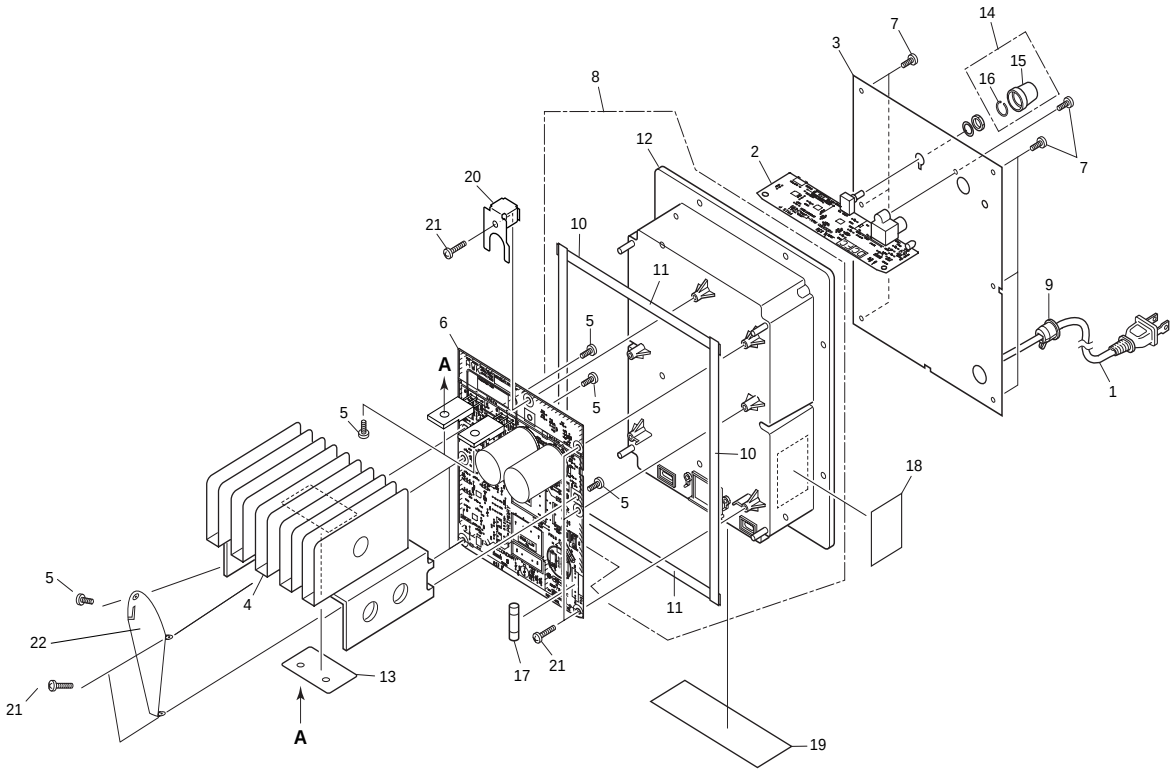

■ EXTERIOR SECTION PARTS LIST

Mark	No.	Description	Parts No.
⚠	1	AC Power Cord	PDG1064
	2	OPERATION ASSY	AWU7761
	3	Operation Panel	ANC8006
NSP	4	Heat Sink	ANH7117
	5	Screw	ABA1052
	6	AMP ASSY	AWU7760
	7	Screw	BPZ30P080FZK
	8	Rear Case Assy	AXG7085
	9	Cord Stopper	CM–22C
	10	Air Packing L	AEB7172
	11	Air Packing S	AEB7174
	12	Rear Case	AMC7039
	13	Mica Sheet	AEE7033
	14	Vol Knob Assy	PXA1621
NSP	15	Vol Knob	PAC1951
NSP	16	Spring	PBH1229
⚠	17	Fuse (FU 1) 5A	REK1067
	18	Fuse Caution Label	ARW7083
	19	ICP 65 Label	ARW7084
	20	PBS Holder	ANG7329
	21	Screw	IPZ30P120FMC
	22	HS Holder	ANG7397

4. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM

4.1 EXTERIOR SECTION

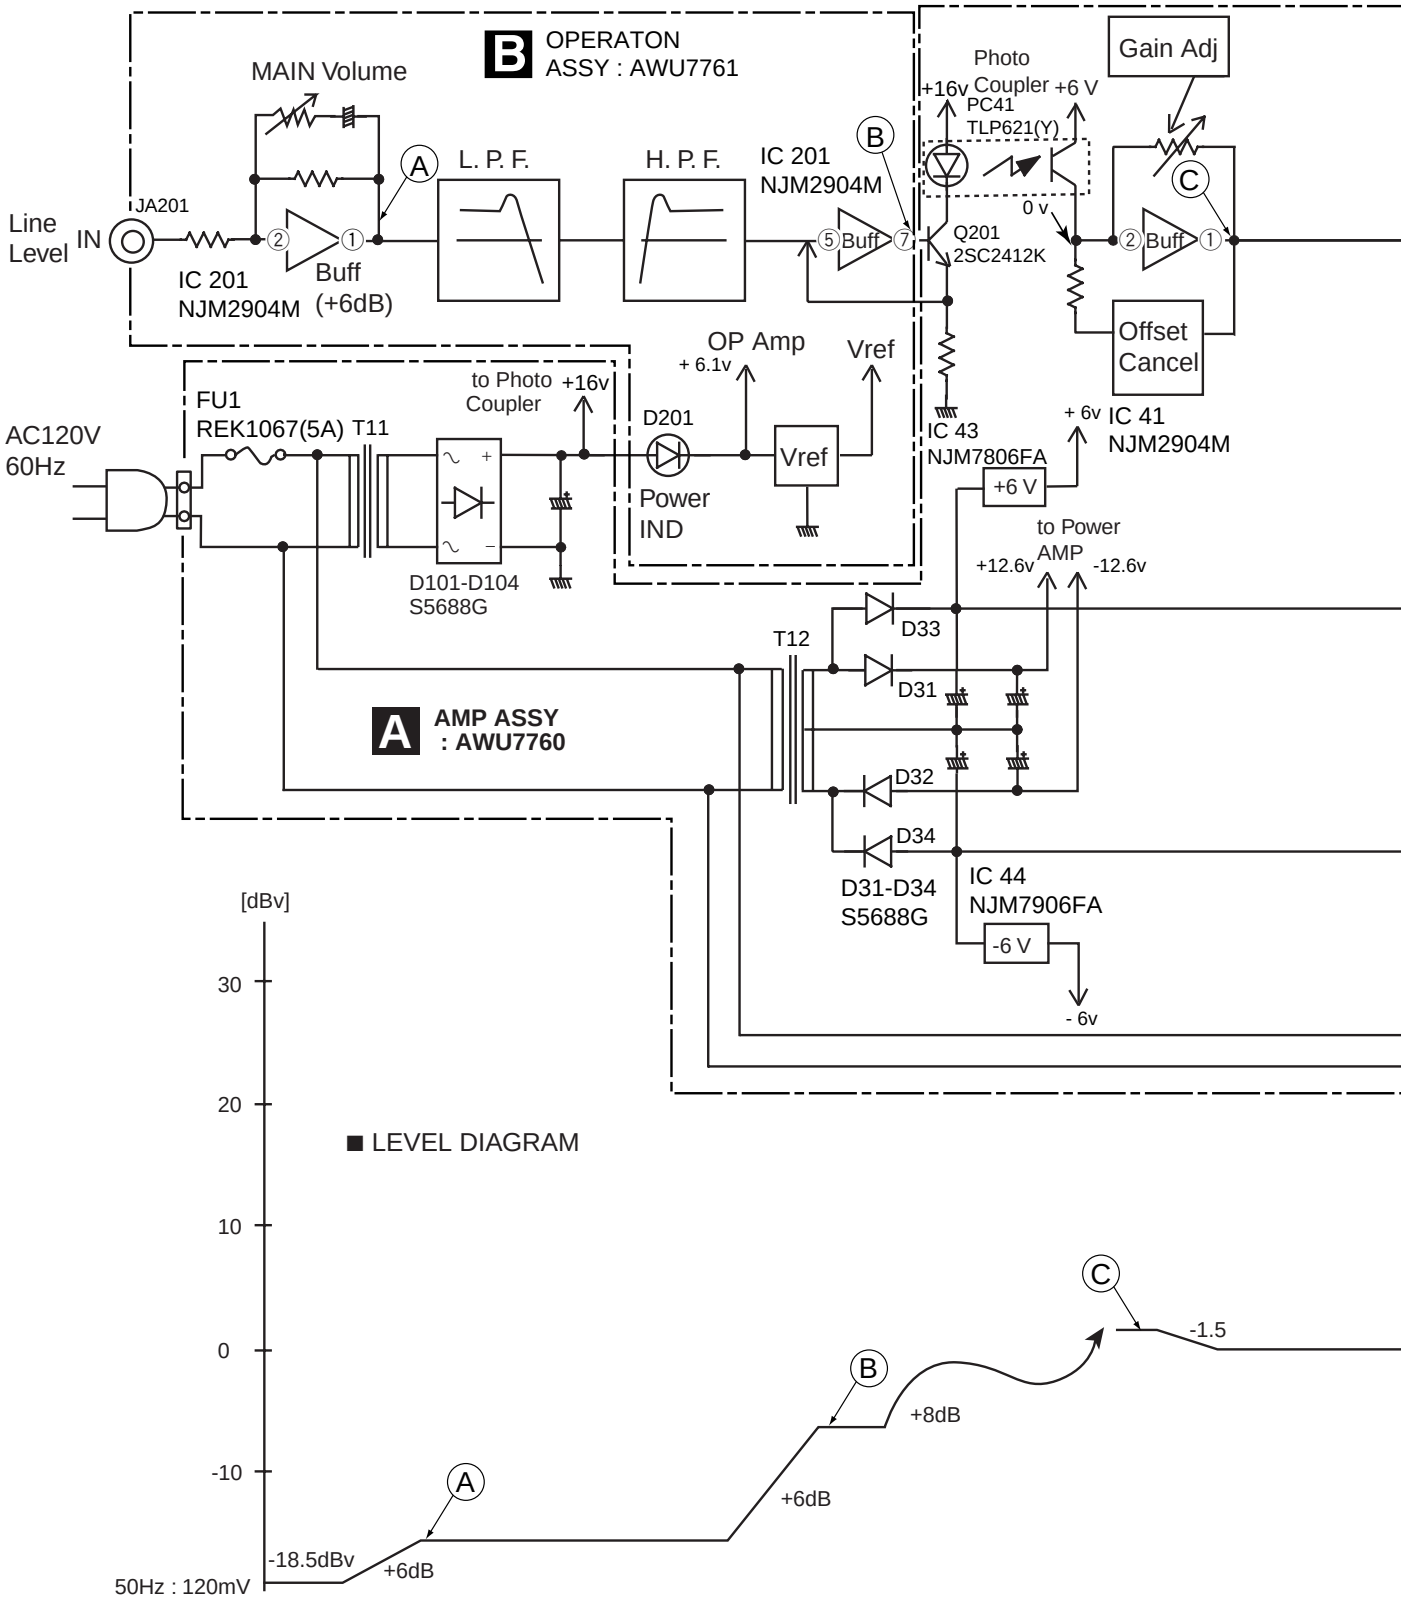

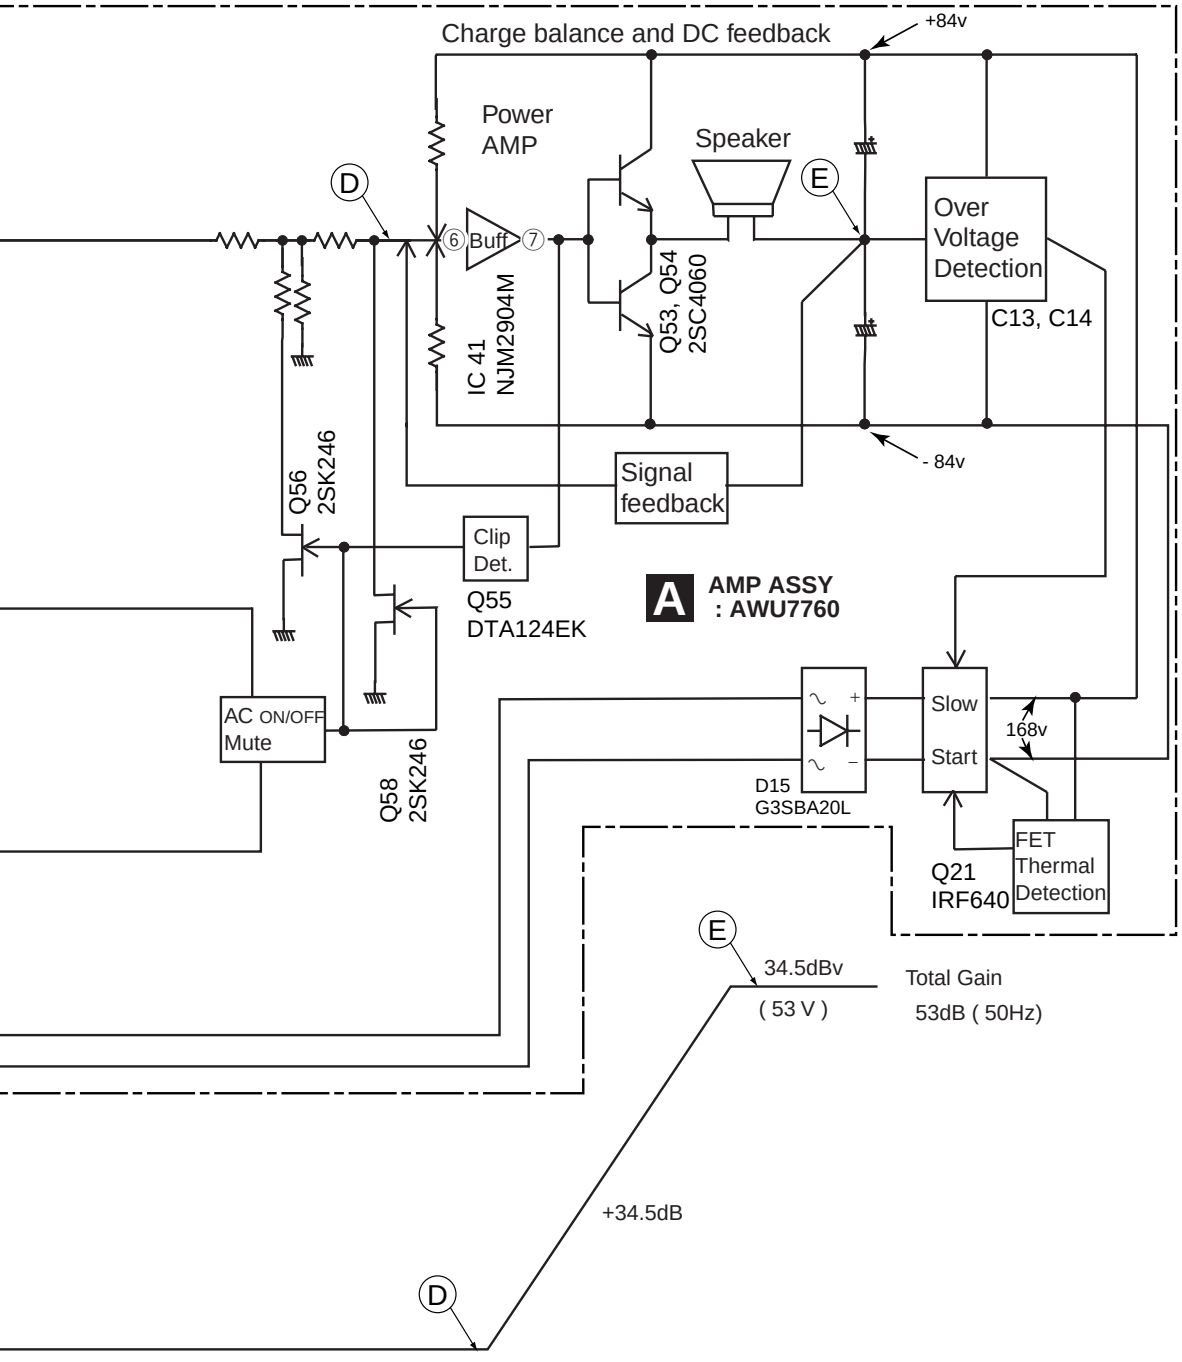
Charge balance and DC feedback
+84v
Power
AMP
Speaker
D
E
⑥ Buff ⑦
IC 41
NJM2904M
Q53, Q54
2SC4060
Over
Voltage
Detection
C13, C14
- 84v
Signal
feedback
Q56
2SK246
Clip
Det.
Q55
DTA124EK
A
AMP ASSY
: AWU7760
AC ON/OFF
Mute
Q58
2SK246
D15
G3SBA20L
Slow
Start
168v
FET
Thermal
Detection
Q21
IRF640
E
34.5dBv
(53 V)
Total Gain
53dB (50Hz)
+34.5dB
D

4.2 AMP and OPERATION ASSYS

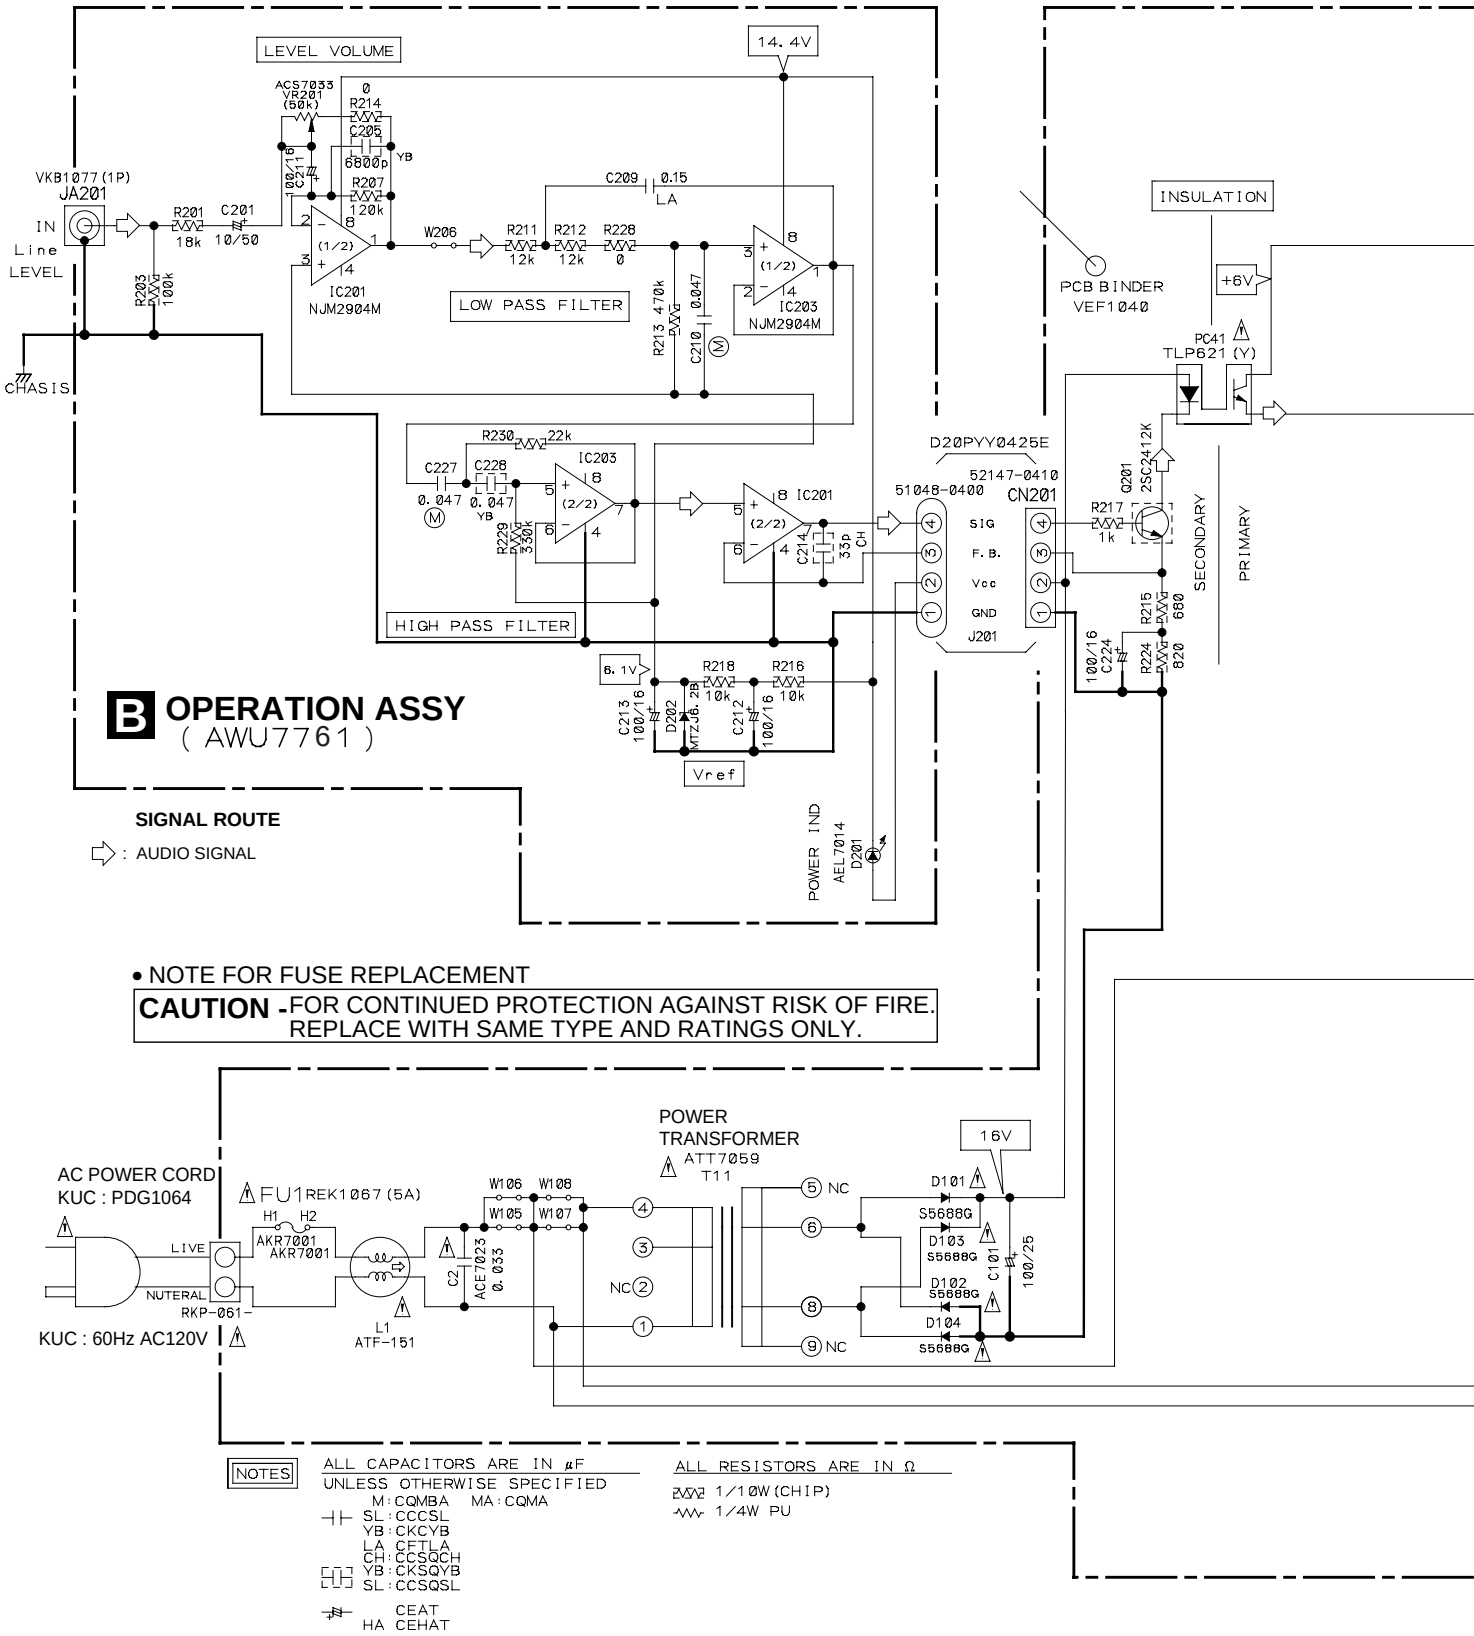

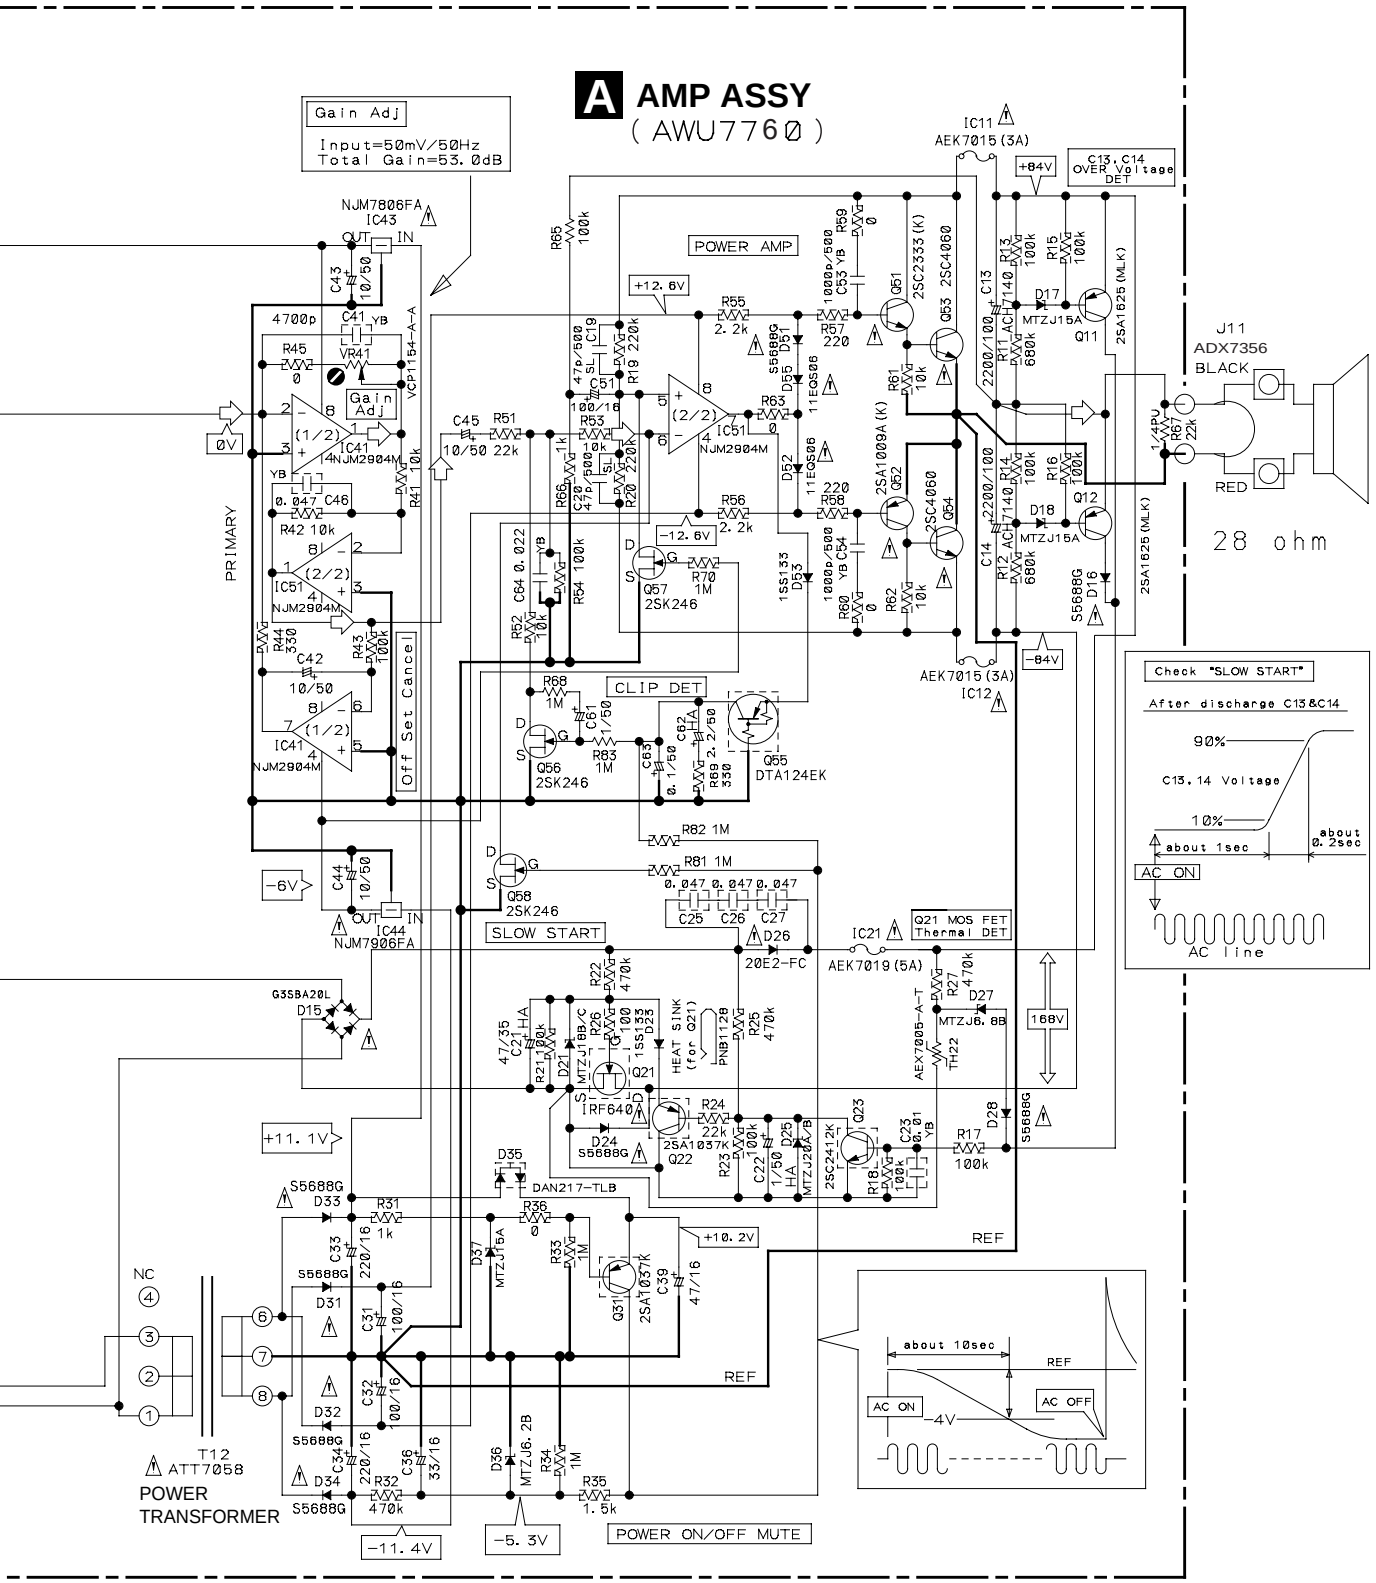

CAUTION : FOR CONTINUED PROTECTION AGAINST RISK OF FIRE. REPLACE ONLY WITH SAME TYPE NO. 491005 FOR IC21, 4910003 FOR IC11, IC12 MFD. BY LITTELFUSE INC.

5. PCB CONNECTION DIAGRAM

NOTE FOR PCB DIAGRAMS:

1. Part numbers in PCB diagrams match those in the schematic diagrams.
2. A comparison between the main parts of PCB and schematic diagrams is shown below.

Symbol in PCB Diagrams	Symbol in Schematic Diagrams	Part Name
B C E	B C E B C E	Transistor
B C E	B C E B C E	Transistor with resistor
D G S	D G S D G S	Field effect transistor
		Resistor array
		3-terminal regulator

3. The parts mounted on this PCB include all necessary parts for several destination.
   For further information for respective destinations, be sure to check with the schematic diagram.
4. Viewpoint of PCB diagrams

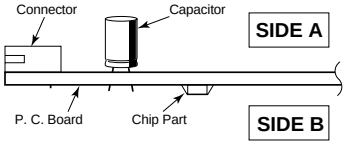

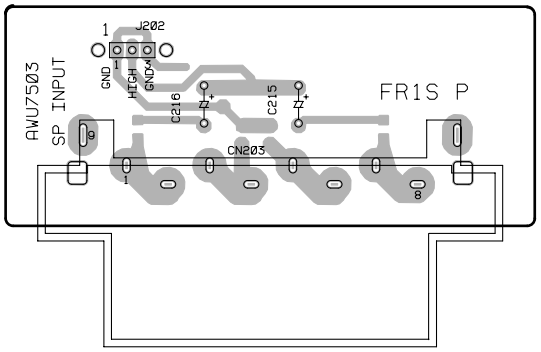

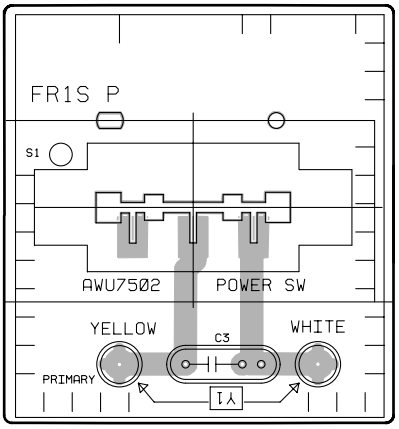

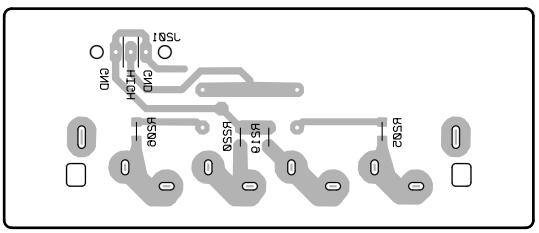

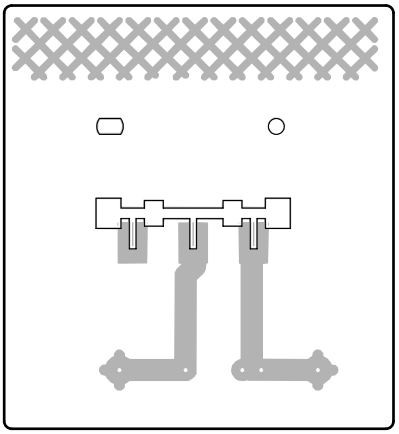

SIDE A

A AMP ASSY

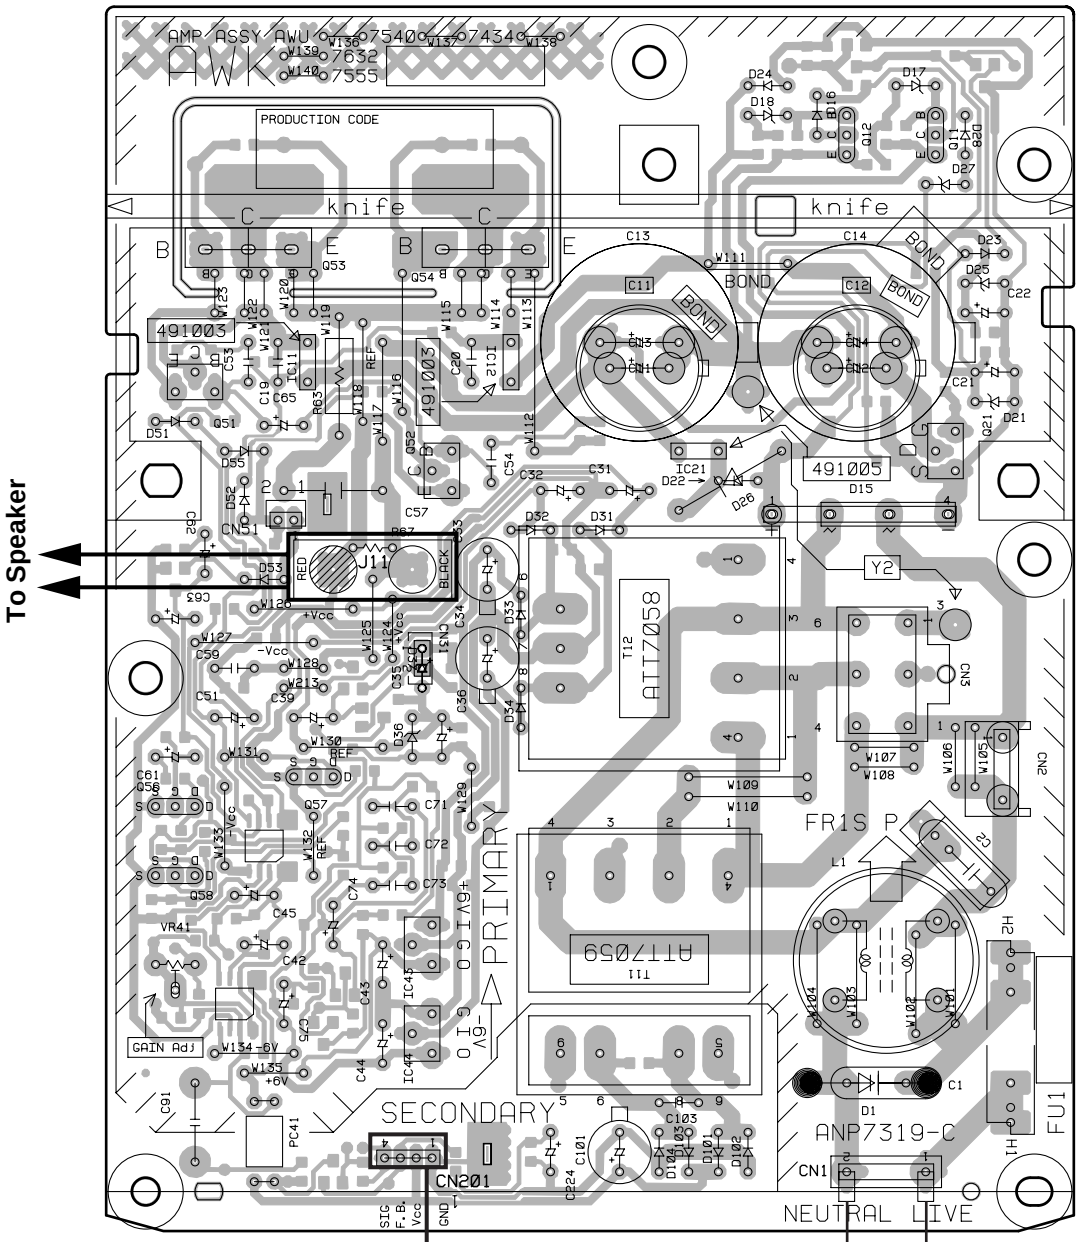

(ANP7319-C)

AC POWER CORD
LIVE
NEUTRAL

B OPERATION ASSY

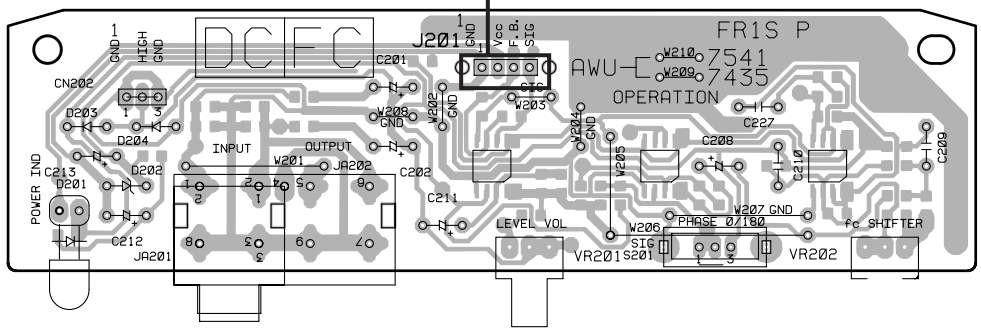

A B

A AMP ASSY

SIDE B

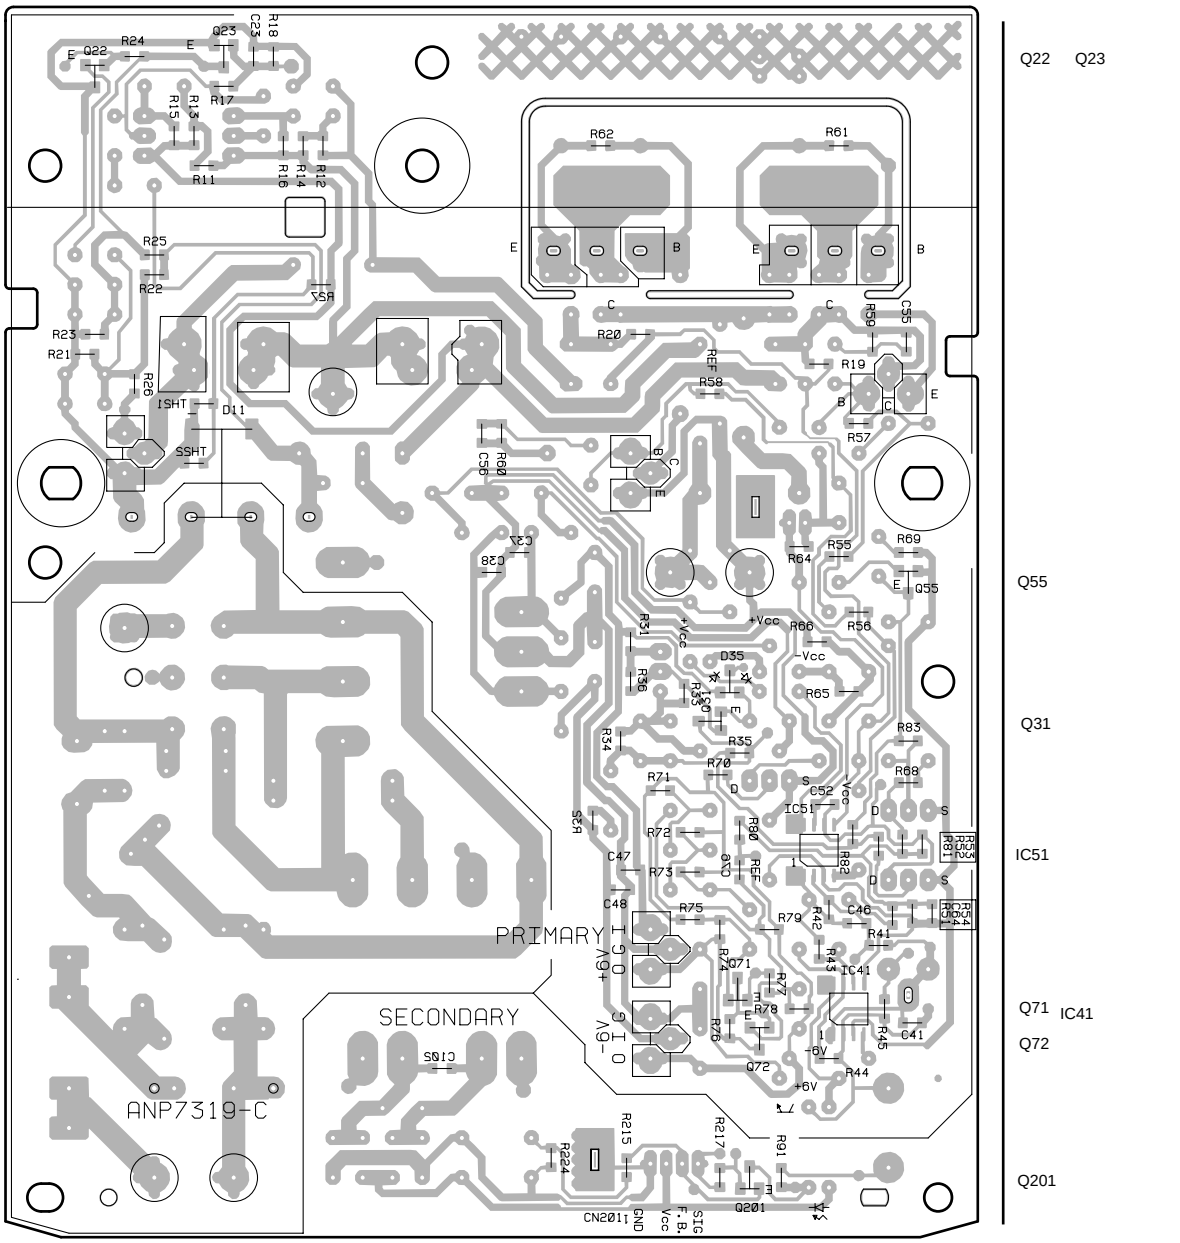

B OPERATION ASSY

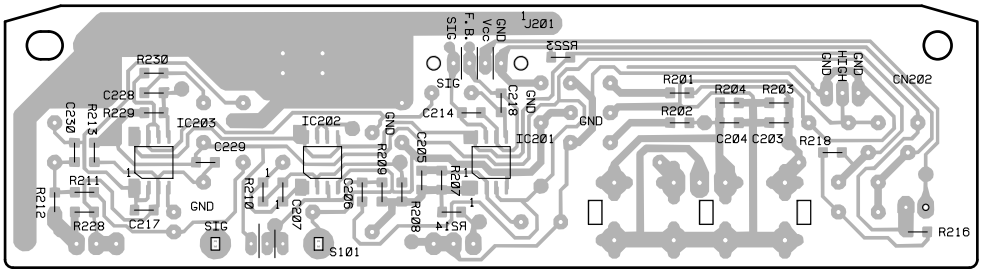

(ANP7319-C)

A B

6. PCB PARTS LIST

NOTES : ● *Parts marked by " NSP " are generally unavailable because they are not in our Master Spare Parts List.*
● *The mark ⚠ found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
● *When ordering resistors, first convert resistance values into code form as shown in the following examples.*

Ex. 1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J = 5%, and K = 10%).
560 Ω → 56 x 10 [1] → 561 ..... RD1/4PU 561 J
47k Ω → 47 x 10 [3] → 473 ..... RD1/4PU 473 J
0.5 Ω → R50 ..... RN2H R50 K
1 Ω → 1R0 ..... RS1P 1R0 K

Ex. 2 When there are 3 effective digits (such as in high precision metal film resistors).
5.62k Ω = 562 x 10 [1] = 5621 ..... RN1/4PC 5621 F

LIST OF PCB ASSEMBLIES

NSP	SUBWOOFER AMP	AWK7722
	┣ AMP ASSY	AWU7760
	┗ OPERATION ASSY	AWU7761

A AMP ASSY

SEMICONDUCTORS

Mark	No.	Description	Parts No.
	IC41,IC51		NJM2904M
⚠	IC43		NJM7806FA
⚠	IC44		NJM7906FA
⚠	Q52		2SA1009A(K)
	Q22, Q31		2SA1037K
	Q11, Q12		2SA1625
⚠	Q51		2SC2333(K)
	Q201, Q23		2SC2412K
⚠	Q53, Q54		2SC4060
	Q56, Q58		2SK246
⚠	Q57		2SK246
	Q55		DTA124EK
⚠	Q21		IRF640
	D52, D55		11EQS06
	D23, D53		1SS133
⚠	D26		20E2-FC
	D35		DAN217
⚠	D15		G3SBA20L
	D17, D18, D37		MTZJ15A
⚠	D21		MTZJ18
	D25		MTZJ20
	D36		MTZJ6.2B
	D27		MTZJ6.8B
⚠	D101–D104,D16,D24,D28		S5688G
⚠	D31–D34		S5688G
	D51		S5688G
⚠	TH22		AEX7005
⚠	PC41		TLP621(Y)

COILS AND FILTERS

Mark	No.	Description	Parts No.
⚠	L1		ATF-151

TRANSFORMERS

Mark	No.	Description	Parts No.
⚠	T12		ATT7058
⚠	T11		ATT7059

CAPACITORS

Mark	No.	Description	Parts No.
⚠	C2	(0.033mF/250V)	ACE7023
	C13, C14	(2200mF/100V)	ACH7140
	C19, C20		CCSL470K2H
	C42–C45		CEAT100M50
	C224, C31, C32, C51		CEAT101M16
	C101		CEAT101M25
	C61		CEAT1R0M50
	C33, C34		CEAT221M16
	C36		CEAT330M16
	C39		CEAT470M16
	C63		CEATR10M50
	C22		CEHAT1R0M50
	C62		CEHAT2R2M50
	C21		CEHAT470M50
	C53, C54		CKCYB102K2H
	C23		CKSQYB103K50
	C64		CKSQYB223K50
	C41		CKSQYB472K50
	C25–C27, C46		CKSQYB473K50
	C24		CQMA153K2E

RESISTORS

Mark	No.	Description	Parts No.
	R67		RD1/4PU223J
⚠	R26		RS1/10S101J
⚠	R57, R58		RS1/10S221J
	VR41	(4.7kΩ)	VCP1154
	Other Resistors		RS1/10S□□□J

Mark	No.	Description	Parts No.

OTHERS

	CN201 4P	CONNECTOR	52147-0410
	J11	CABLE ASSY 2P	ADX7312
⚠	IC11, IC12	PROTECTOR(3A)	AEK7015
⚠	IC21	PROTECTOR(5A)	AEK7019
	H1, H2	FUSE CLIP	AKR7001
⚠		TERMINAL	RKC-061
		PCB BINDER	VEF1040

B OPERATION ASSY

SEMICONDUCTORS

IC201, IC203	NJM2904M
D201	AEL7014
D202	MTZJ6.2B

CAPACITORS

C214	CCSQCH330J50
C201	CEAT100M50
C211–C213	CEAT101M16
C209	CFTLA154J50
C228	CKSQYB473K50
C205	CKSQYB682K50
C227, C210	CQMBA473J50

RESISTORS

VR201	(50kΩ)	ACS7033
Other Resistors		RS1/10S□□□J

OTHERS

J201	JUMPER WIRE	D20PYY0425E
JA201	1P JACK	VKB1077
4P	CABLE HOLDER	51048-0400

7. ADJUSTMENT

ATTENTION

- Don' t make speaker terminal short circuit during the power supply injection.
- Since the PRIMARY part of the AMP ASSY is not insulated, be careful of electric shock.
- Be sure to disconnect the power supply cord before touching the AMP ASSY board.
- Discharge the C13, C14 capacitors!

7.1 MEASURING INSTRUMENTS

- Provide yourself with the following measuring devices:

(1) Digital voltmeter
(2) Oscilloscope
(3) Attenuator
(4) Low-frequency oscillator

■ GAIN Adjustment

(1) Decrease the level of the Adjustment Variable resistors (VR) for the channel to adjusted.
(2) Increase LEVEL VOLUME maximum.
(3) Adjust GAIN (VR41) volume.

- Apply the signal to the Line IN of JA201.
- As the gain from IN to SPEAKER OUT 53dB(freq. = 50 Hz), input of 10mVrms to Input results in output of 0.72 W (4.5 Vrms/28 W) at SPEAKER OUT.
- After power-supply ON, after waiting abut 10 seconds, it adjustment because, wave form rises behind time for slow start operation.

■ Test Point

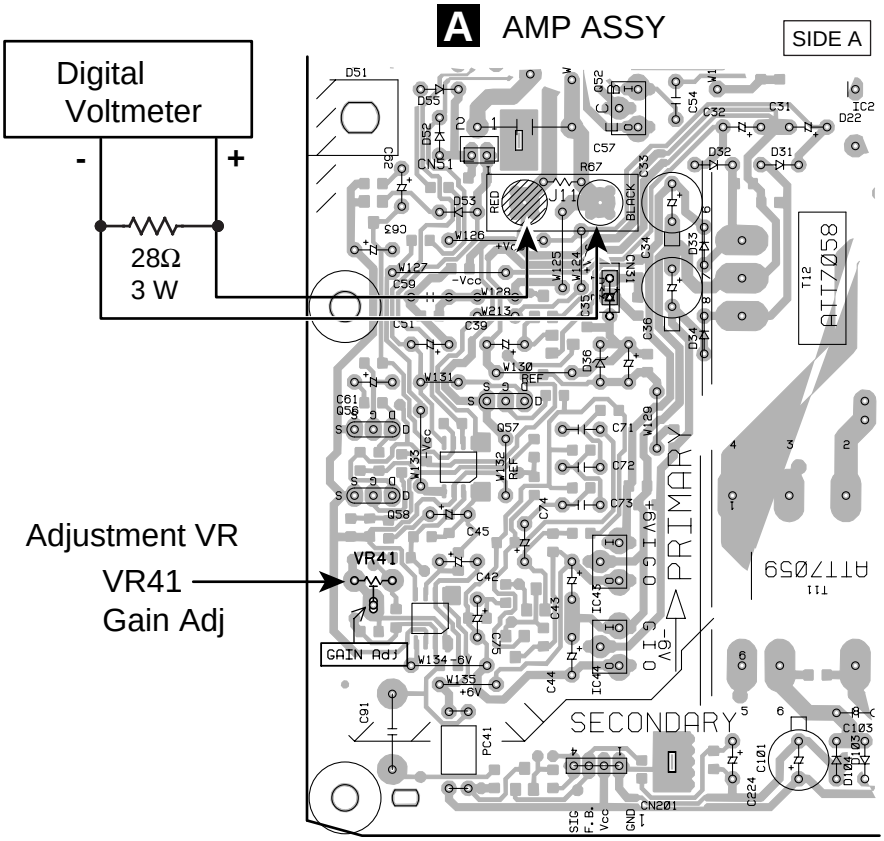

8. PANEL FACILITIES

REAR SECTION

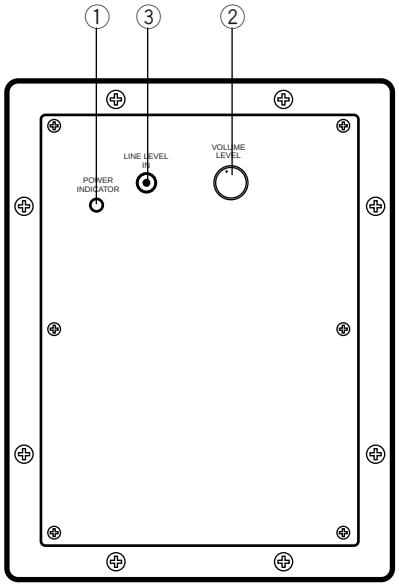

If the output of the receiver connected to this unit is high or if the output has a low range boosted by the Bass control, Bass boost, or other means, there may be some sound distortion even if the level of the unit is lowered. In this case, lower the output level (Volume, Bass control, Bass boost) on the receiver side.

① POWER indicator

Illuminates **RED** when the power is being supplied.

② Subwoofer LEVEL knob

Volume of subwoofer is adjusted with this knob. Turn this knob clockwise to raise the level.

- Starting with “MIN“, turn this knob and raise the volume slowly. If the unit is turned on with the volume set too high, it could cause hearing and/or speaker damage. Do not turn the volume up excessively high. The low frequency sound is apt to be raised too high since it is less disturbing and harder to detect than high frequencies. Caution must be taken here since the amplifier and speaker of the S-FRCW220 and, S-FCRW720 will be clipped when the output of the amplifier or receiver is increased with the subwoofer level set to “MAX“.

③ Subwoofer input terminal (LINE LEVEL INPUT)

Connect SUBWOOFER OUTPUT terminal of the receiver to this terminal with the accessory RCA cord.

9. SPECIFICATIONS

FRONT / FRONT CENTER SPEAKERS

Enclosure ..... Closed box type
System ..... 2-way loudspeaker

Drive Units

Tweeter ..... 3/4” dome
Midrange ..... 3” cone magnetically shielded

Nominal Impedance ..... 8 ohm
Frequency Range ..... 100-20k Hz
Sensitivity spl @ 1m/ 2.83 V ..... 85 dB
Maximum Input Power ..... 100 W
External Dimensions ..... 3 7/8” x 6 3/8” x 4 7/8” WXHXD
Weight ..... 1 lb. 8 oz.

REAR / REAR CENTER SPEAKERS

Enclosure ..... Closed box type
System ..... 2-way loudspeaker

Drive Units

Tweeter ..... 3/4” dome
Midrange ..... 3” cone

Nominal Impedance ..... 8 ohm
Frequency Range ..... 100-20k Hz
Sensitivity spl @ 1m/ 2.83 V 85dB
Maximum Input Power ..... 100 W
External Dimensions ..... 3 7/8” x 6 3/8” x 4 7/8” WXHXD
Weight ..... 1 lb. 2 oz.

POWERED SUBWOOFER

Enclosure ..... Floor standing bass-reflex type.

Speaker ..... 20 cm (8 inch)

Power Amplifier ..... Continuous Average Power Output is 100 Watts* min, at 28 ohms from 20 Hertz to 200 Hertz with no more than 1%** total harmonic distortion.

Input ..... 100 mV / 18 kW (at 60 Hz)
(Sensitivity at specified frequency/impedance)
Line level input(RCA - jack)

Crossover Frequency ..... 150 Hz

External Dimensions ..... 8 3/8” x 14 3/16” x 15 7/8” WXHXD

Weight ..... 17 lb. 12 oz.

Power Requirements ..... 120 VAC, 60 Hz

Power Consumption ..... 64 W 130 VA

Note: *Specifications and design subject to possible modification without notice due to improvements.*

* *Measured pursuant to the Federal Trade Commission's Trade Regulation rule on Power Output Claims for Amplifiers.*
** *Measured by Audio Spectrum Analyzer.*